



Quick Start Guide

To setup your new NEXA barcode scanner scan the appropriate barcodes below from top to bottom.
By default each scanner is configured for triggered mode and keyboard wedge.

Configure for USB



Configure for Keyboard Wedge



Configure For Triggerless Mode



Configure For Triggered Mode

